

This document does not include the complete instructions for the safe use of the described equipment. Make sure that you have read and understood the safety instructions in the user documentation for the described equipment before proceeding.

CANblue II

Firmware Update

Dependent on the product version of the CANblue II different firmware versions must be used:

- For CANblue II devices with product version 1.0 and 1.1 use firmware version V2.00.xx.
- For CANblue II devices with product version 2.0 and higher use firmware version V2.01.xx.

The product version is printed on the label on the back of the device.

For product versions 1.0 and 1.1:

- ▶ Contact Ixxat support for update files.

For product versions 2.0 and higher:

- ▶ Download the latest update files from support area on www.ixxat.com.
- ▶ Restore the CANblue II to factory settings (see User Manual *CANblue II* for further information).
- ▶ Make sure that the CANblueCon configuration tool is closed.
- ▶ Install a virtual Config COM port (see User Manual *CANblue II* for further information).
- ▶ Open Command Prompt (*cmd.exe*) and navigate to the folder *FW Update* in the folder of the downloaded update files.
- ▶ Call **FW-Update <COM-PORT>** with the COM port in use (e.g. **FW-Update 5**).
 - New firmware version and firmware version of the CANblue II are displayed.
 - Firmware is updated.
 - When the update is completed, the CANblue II automatically restarts.
 - LED CAN and LED Mode are flashing red and green during the restart.
- ▶ To check the firmware version enter command **D VERSION** in the CANblueCon configuration tool.