

Firmware and Bootmanager Flash with Ixxat CAN Interfaces

Updating the Firmware or Bootmanager



CAN@net II and CANblue are not updated via the VCI Flashloader. Observe different update instructions for CAN@net II and CANblue.



Do not switch off the device before the firmware or bootmanager is flashed completely.

- ▶ Download the latest VCI driver version from www.ixxat.com.
- ▶ Install the VCI driver (see Installation Guide *VCI Driver*).
- ▶ Check www.ixxat.com or contact Ixxat support for the update file.
- ▶ Connect the device to be updated to the computer.
- ▶ Open *Vci4floadGUI.exe* in *C:\Program Files\HMS\Ixxat VCI 4.0*.
- ▶ In field **Destination** in the combo box **Device** select the CAN interface in use.
- ▶ Click button **>>** and select the firmware or bootmanager to be flashed.
- ▶ Click button **Flash** and wait until the firmware is flashed completely.
- ▶ Restart the device.

